 


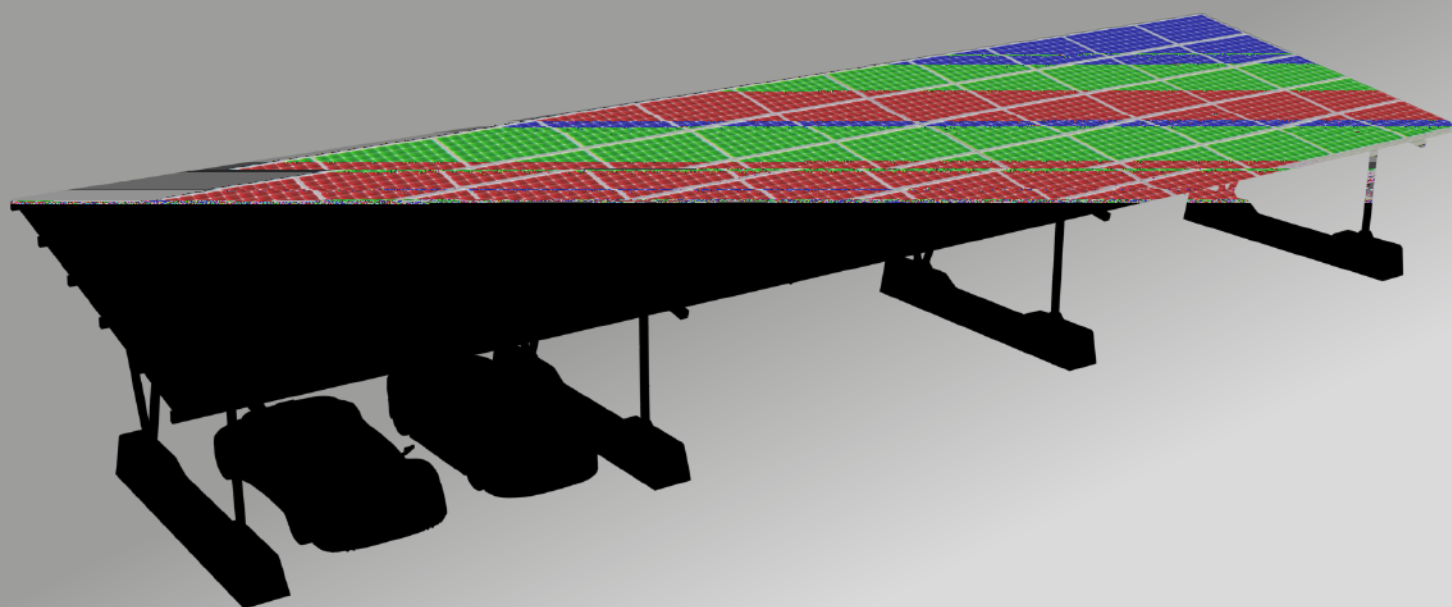

MRac

 
sales@mbt-energy.com

-
-
-
-
-
-
-
-

)

.(

安装工具

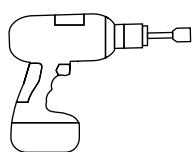

6mm



 
8mm




10mm



12mm

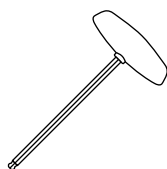


6mm

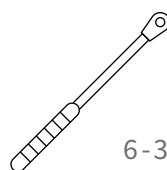 

6-30Nm
(4.5-22.2lb-ft)



 6mm






≥3.0m




≥6.0m

   零件列表

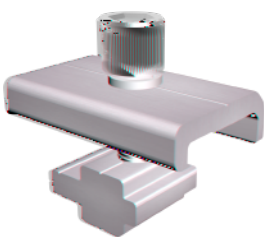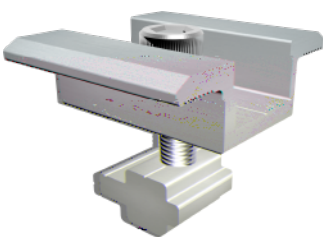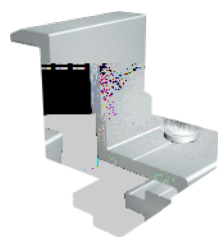

U25

 
C

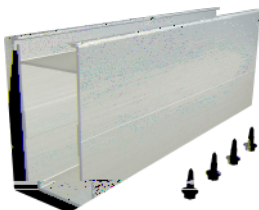

115

115

 100

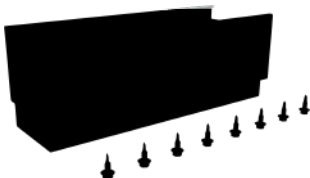


100


T

80*80

 系统组成概述

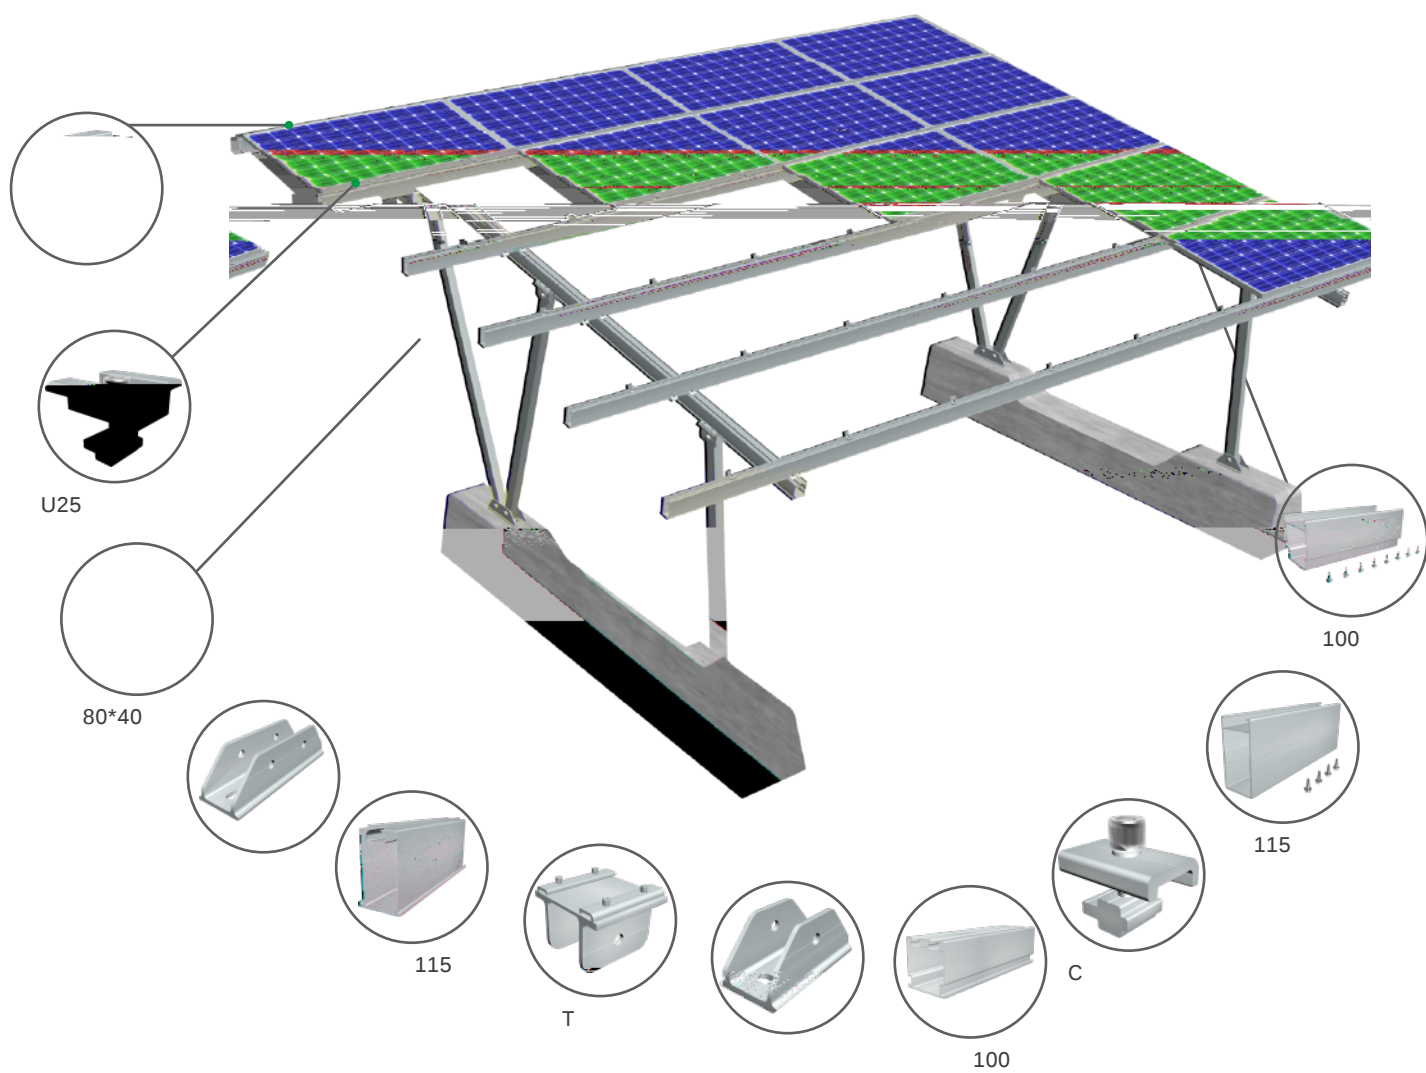


 1.安装支架单元

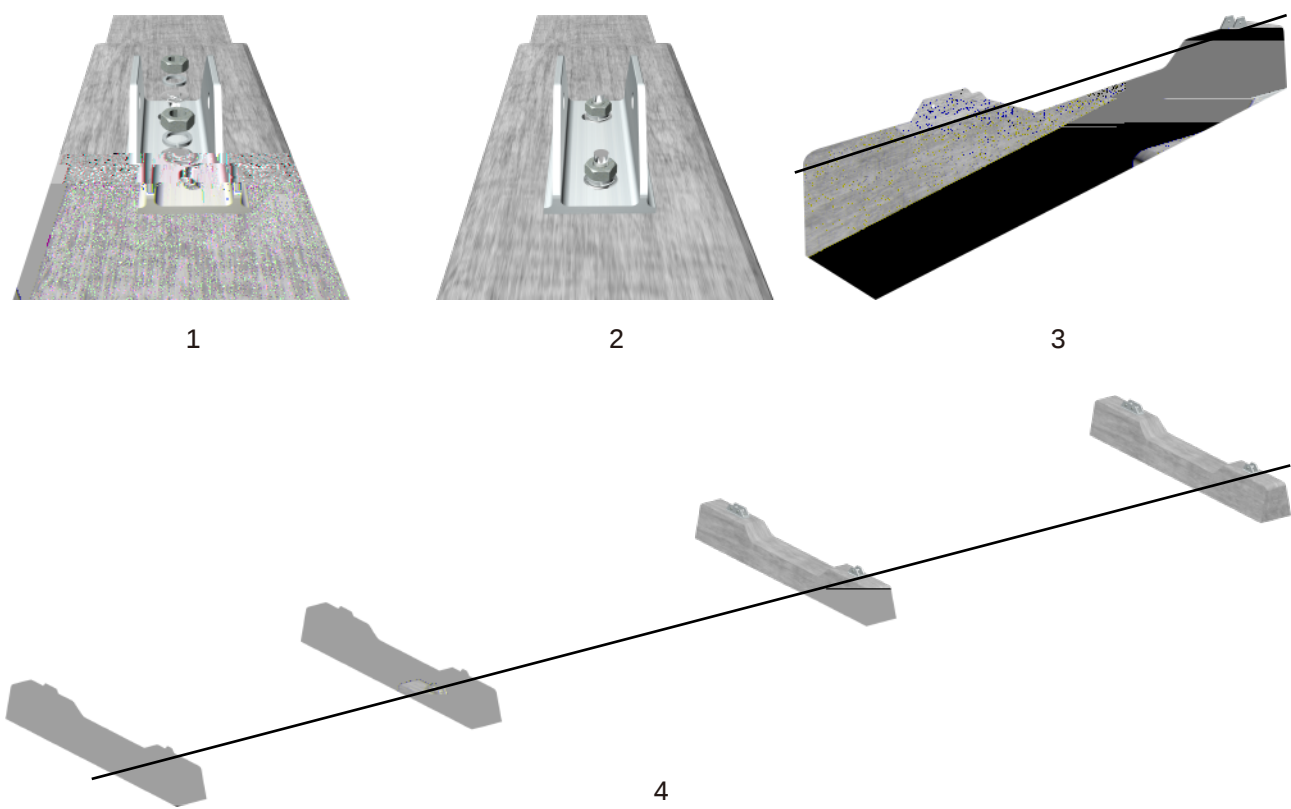

1.1

 1 2 3 4

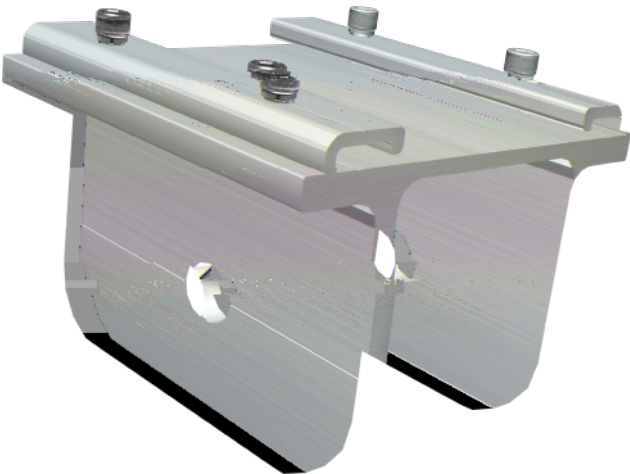

1.2(a)

C

 
150

M8*25

T

100


1.安装支架单元

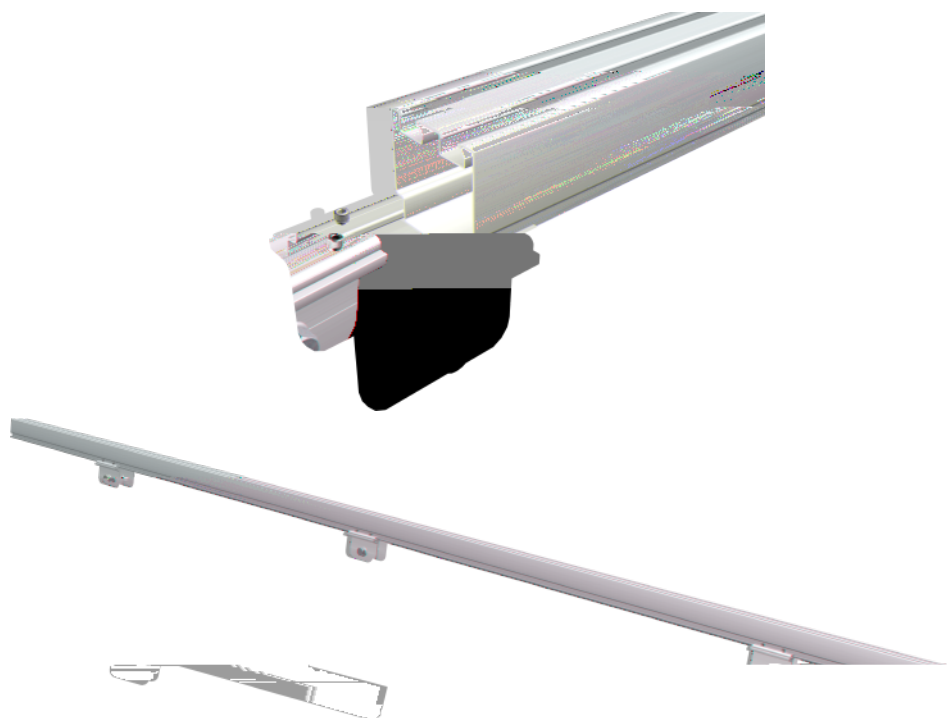

1.2(b)

T

 100,

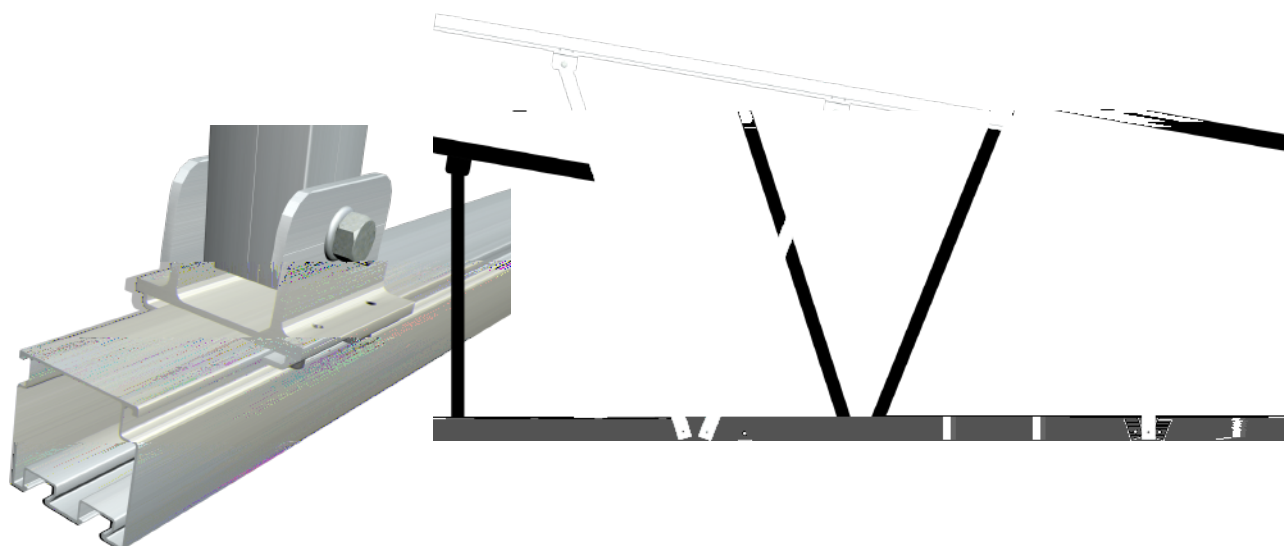

1.2(c)

 
T

80


M20*130

100

1.安装支架单元

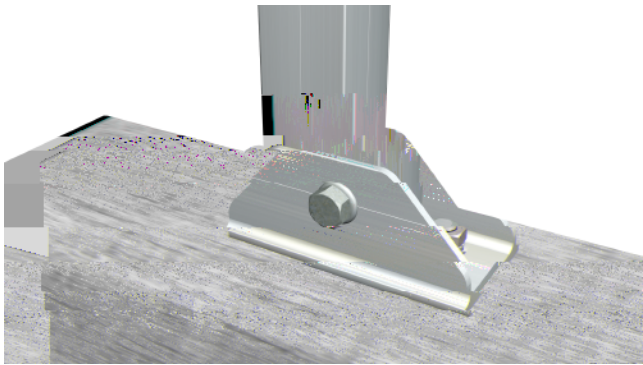


1

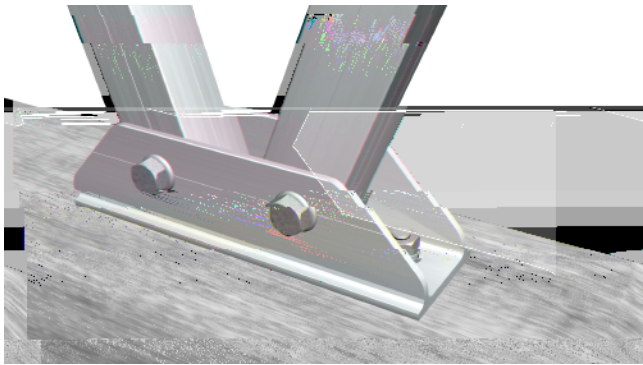 

2



 3

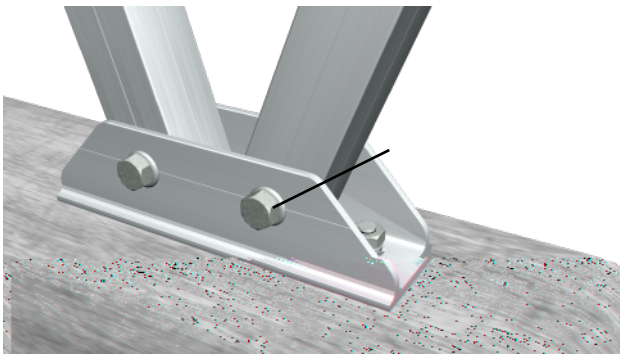

4



5

1.2(d)

1 2 3

: M20*130

80*80

 
M20*130

M20*130

3-4


4 5

1.安装支架单元

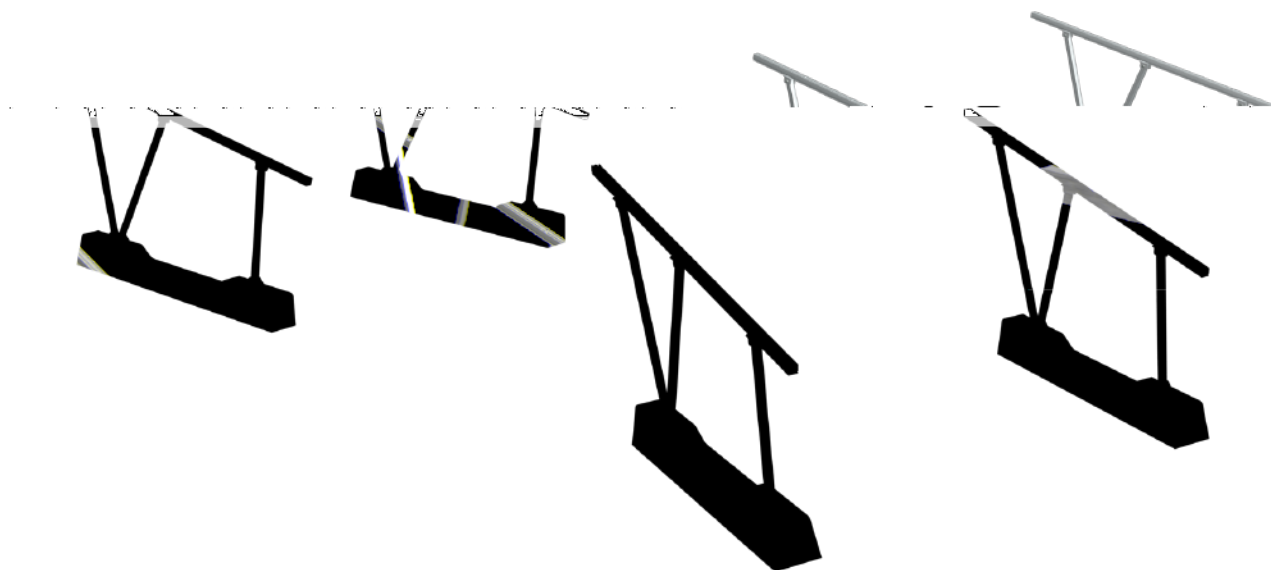

1.2(e)

 2.安装轨道

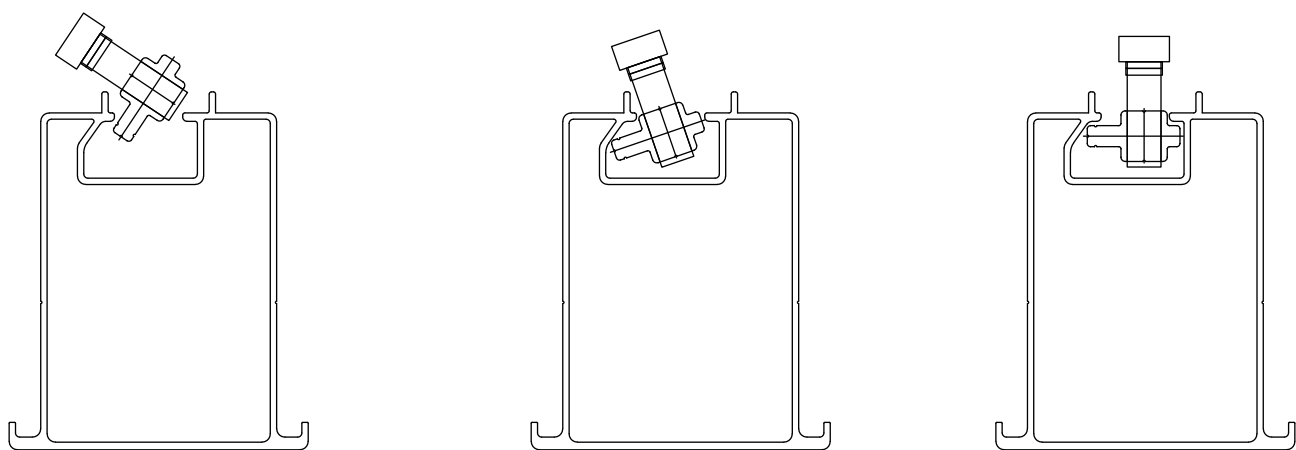

2.1

C



2.2

 
 
115

115


115



2.安装轨道

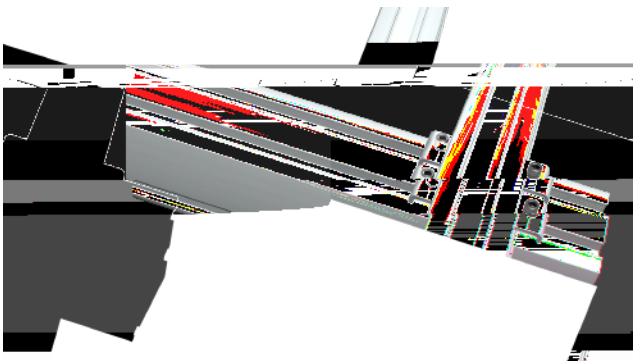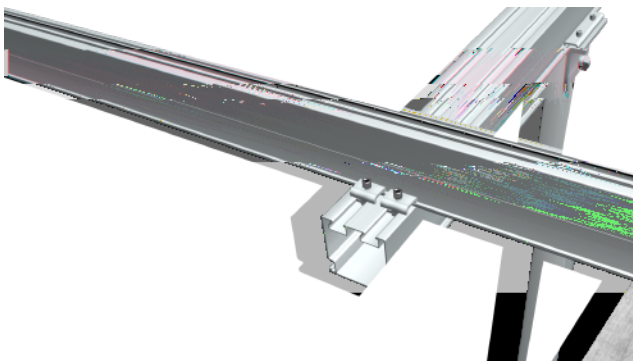


 2.5 C 115 6mm M8
2 C







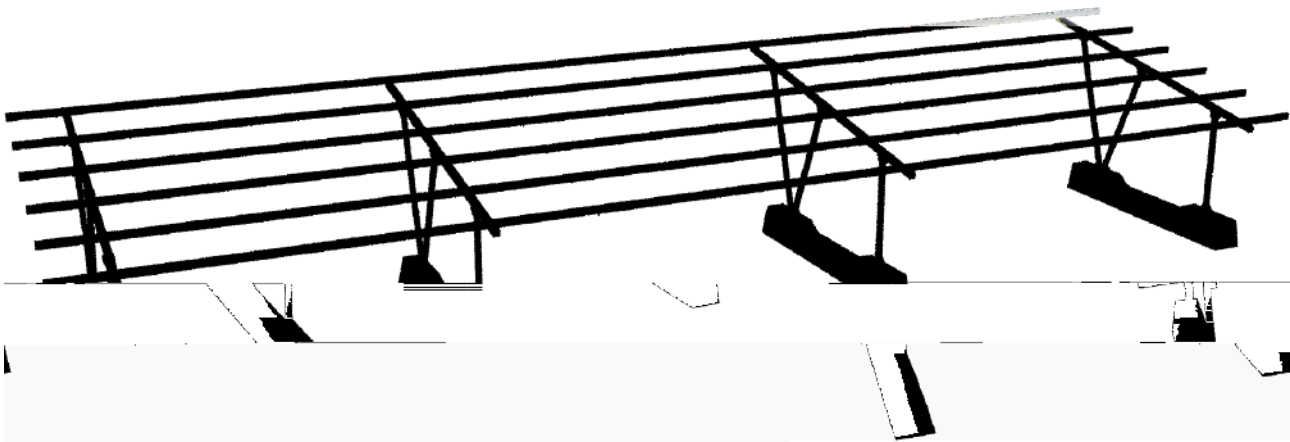


2.6 C

 3.安装太阳能电池板

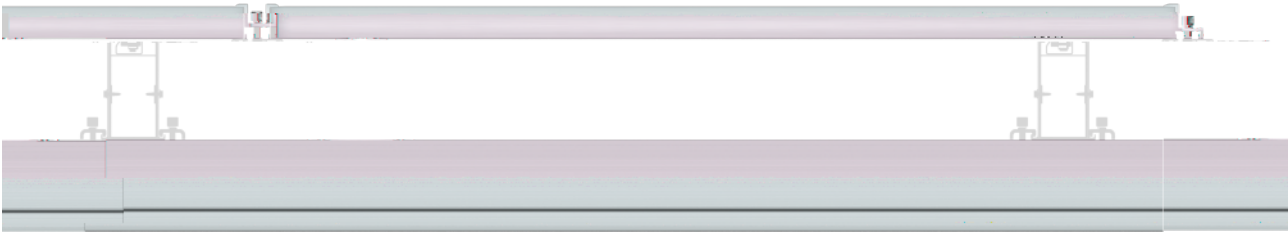

1

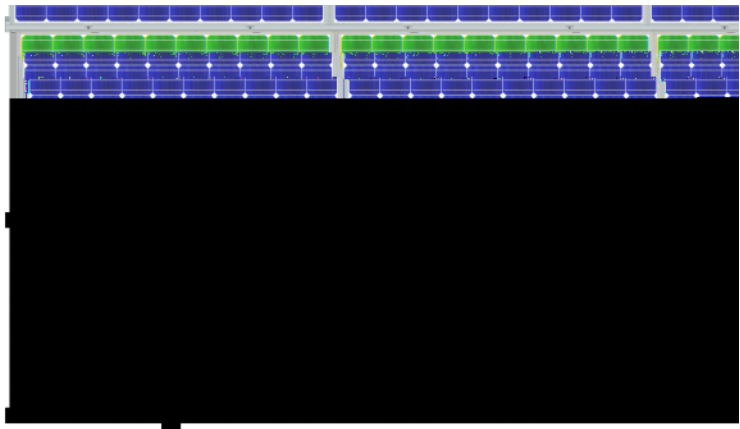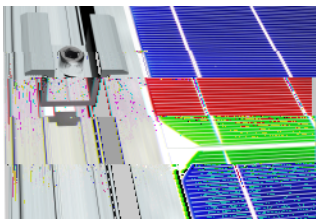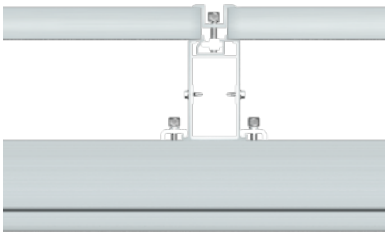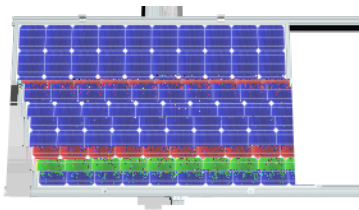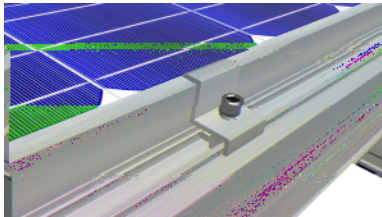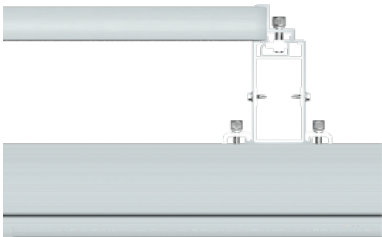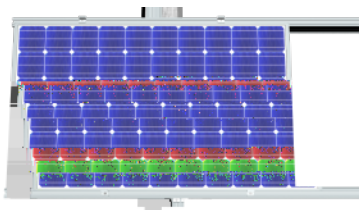       

3.1a.

1

115

U25

b.

115

c.

 
d.

a/c

U25

e.

3.安装太阳能电池板

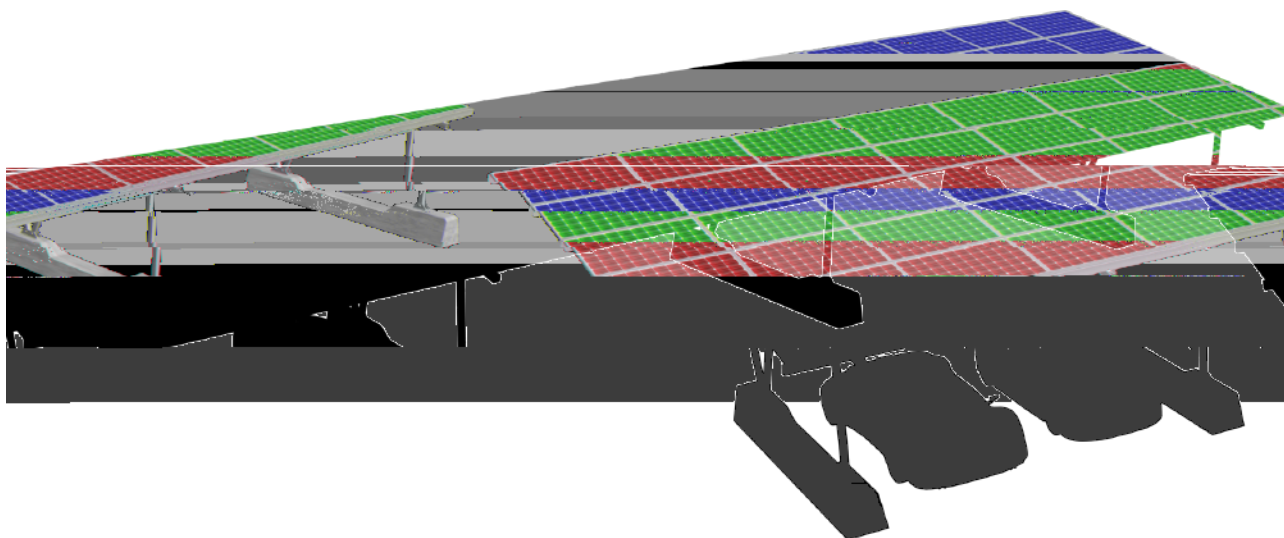

3.2

质保与售后

/

/

 
5

10

A A M A

609&610-02

<http://www.aamanet.org>

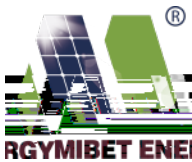

69

86-592-3754999,86-592-6771595
sales@mbt-energy.com